

RIGHT HALF



To assemble the template,
Cut the second page (left half)
along the dotted line.

Lay the cut left half over the
right half making sure the all the
lines and alignment marks match
up evenly.

Tape the two halves together
with clear tape along the dotted
line.

Cut around the perimeter of the
template shape and your
template is ready to be traced
on the wall.

The picture below shows what
the template will look like
assembled and cut out.

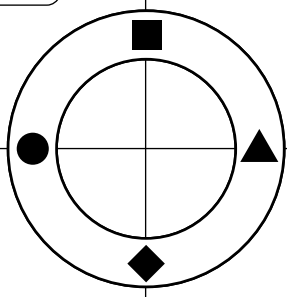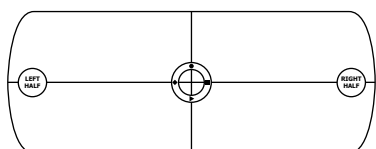

The templates that come with our Soap and
Shampoo Caddies are pre-cut cardboard shapes
that are ready to be traced onto the wall to give
you a guide for cutting your hole.


This substitute template in PDF format is offered
online as an emergency replacement for a lost
cardboard one, or to show the size and shape of
the hole before the caddy arrives.

This template is too large to be printed on a
single page, so you will need to print both pages,
tape or glue them together according to the
alignment lines and marks and cut out the shape
so it can be traced onto the wall.

When printing any PDF file, make sure any
"Shrink", "Expand" or "Scaling" options are
turned off in the printer dialogs, and "Center" is
turned on, or you may get unexpected results.
Make sure you print the whole document so you
will have all the parts.


Rulers are shown along the perimeter to help you
know if your printer output is the correct size and
allow you to modify the size of the pictures if
necessary.

Call 1-800-669-9867 if you need assistance.

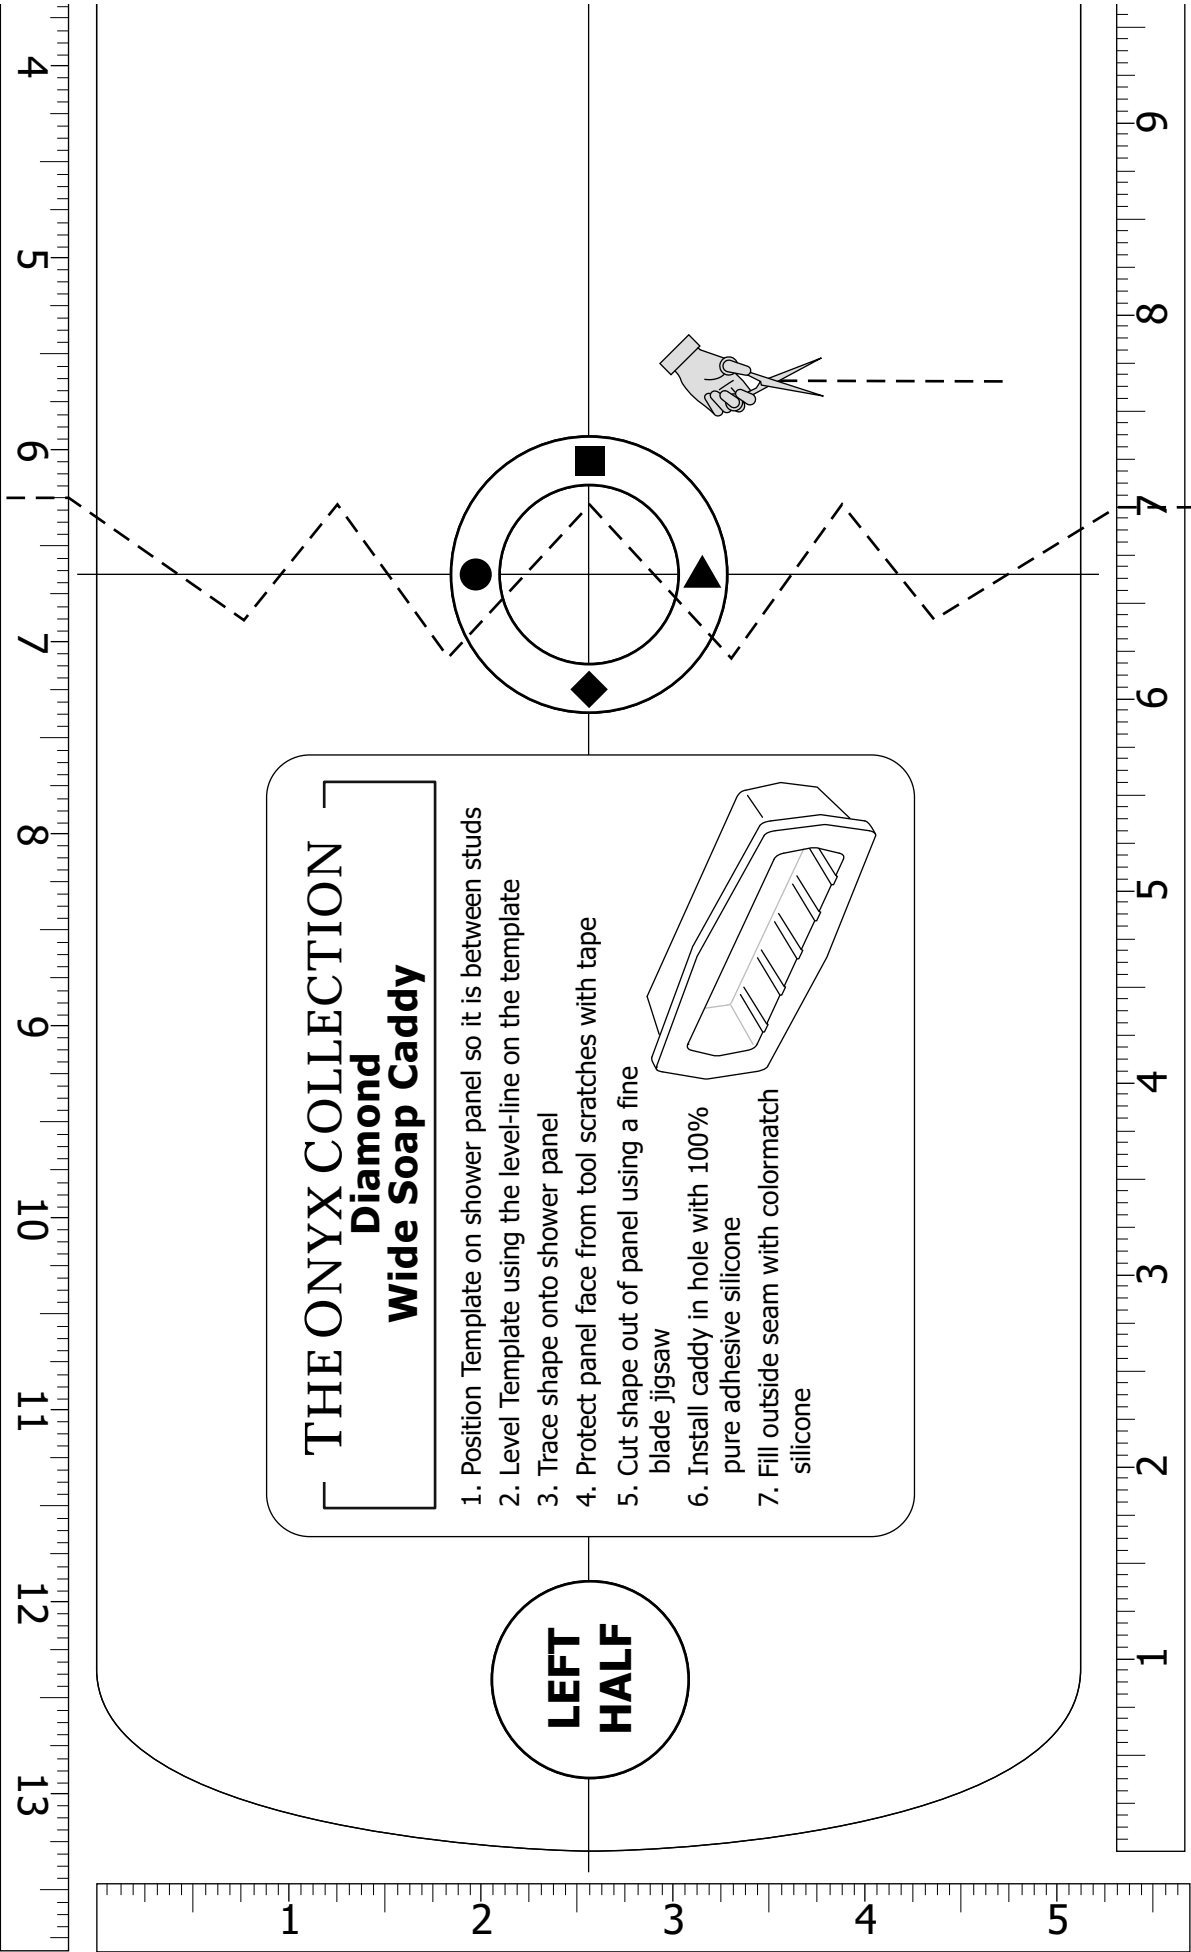

THE ONYX COLLECTION
Diamond
Wide Soap Caddy

1. Position Template on shower panel so it is between studs
2. Level Template using the level-line on the template
3. Trace shape onto shower panel
4. Protect panel face from tool scratches with tape
5. Cut shape out of panel using a fine blade jigsaw
6. Install caddy in hole with 100% pure adhesive silicone
7. Fill outside seam with colormatch silicone

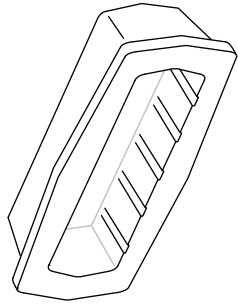

**LEFT
 HALF**