

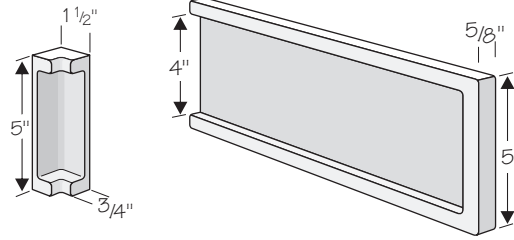


# Mosaic Tile Trim Installation




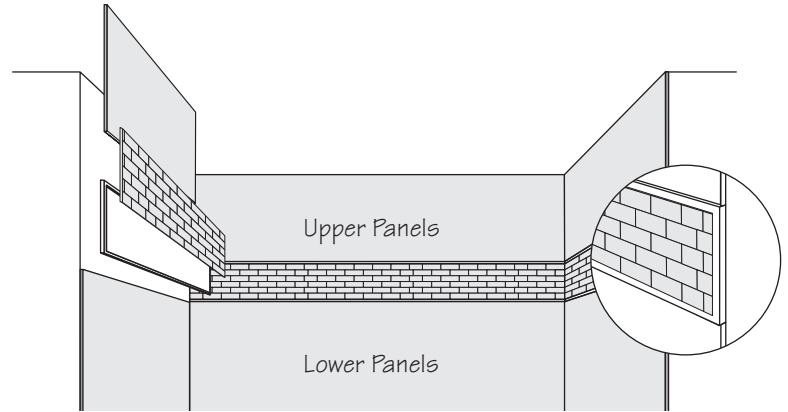


## 1 Overview




- A) The Mosaic Tile Trim installs easily, but will require on-site modifications. Due to the thickness of the trim, shower caddies and shower doors must be taken into consideration to insure proper installation and aesthetics. Several suggestions / options to coordinate the trim with doors and caddies are below.
- B) The Mosaic Tile Trim has a recessed area that is designed to work with mesh mounted mosaic tile.
- C) The perimeter edge of the Mosaic Tile Trim has a thickness of about 9/16", which is about 1/4" thicker than an Onyx Panel.

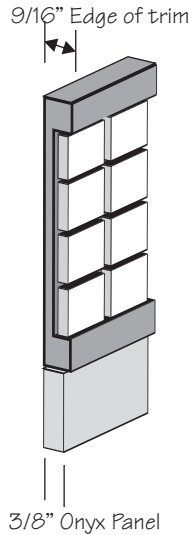

## D) Suggestions for installing the Mosaic Tile Trim with Caddies.

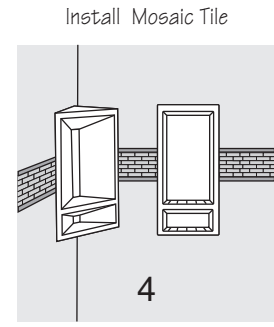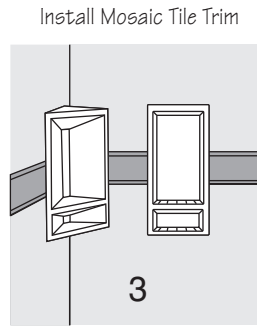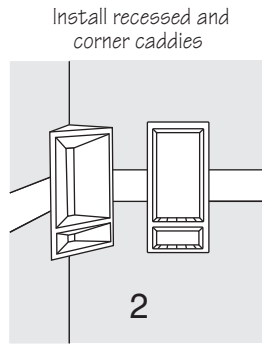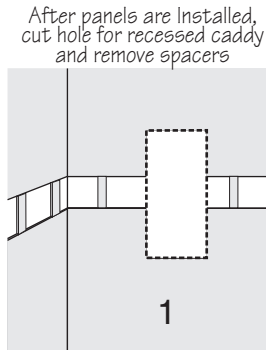


## E) Suggestions for installing the Mosaic Tile Trim with Shower Doors.

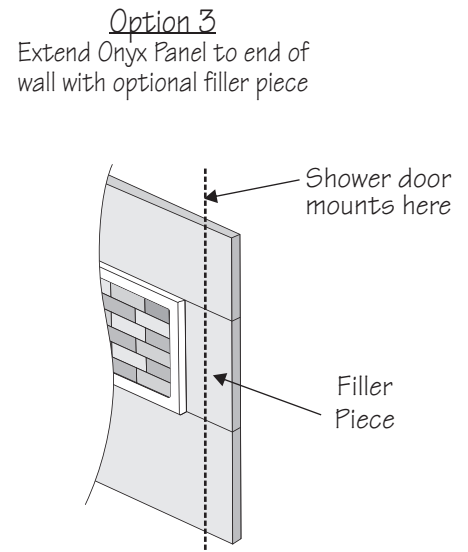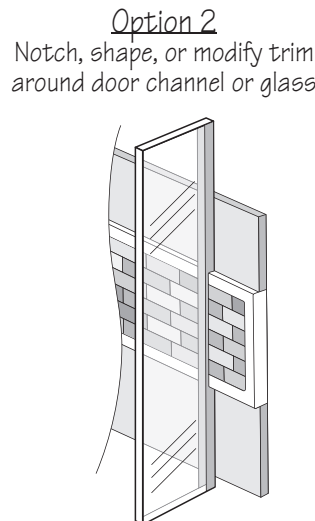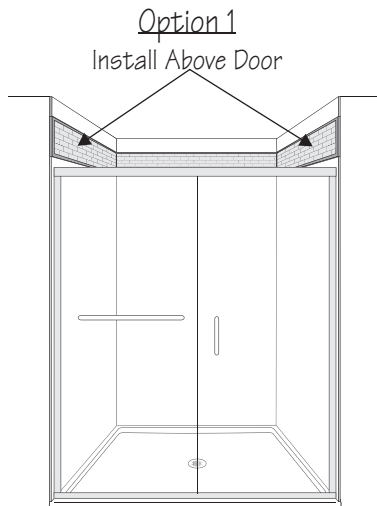

## 2 Installation Details


- A) Determine the height of the Onyx Mosaic Tile Trim. Measure from the bottom edge of the trim location down to the shower base to determine the height of the lower Onyx panels. Measure, cut and install the lower Onyx panels.
- B) Temporarily adhere  $5 \frac{1}{16}$ " to  $5 \frac{1}{8}$ " tall spacers above the Onyx panel to maintain space for Onyx trim to be installed later.
- C) Install the upper Onyx panels, resting the panels on the top edge of the spacers.
- D) Install all caddies and door as needed. (See recommendation on front page), then remove spacers.
- E) Measure, cut, and install the Onyx Mosaic Tile Trim. Use optional corner blocks or miter cuts to join the trim at the corners.
- F) Use adhesive silicone to fill gap where recessed part of trim meets caddies or shower doors.

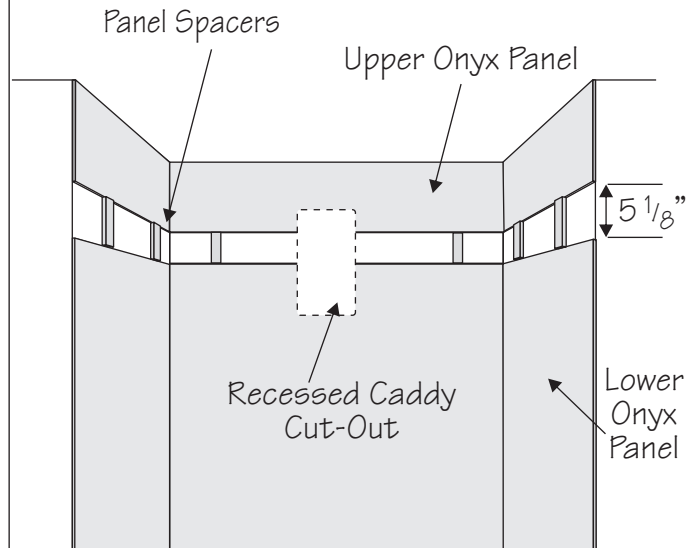

## 3 Installation of Mosaic Tile

- A) We recommend adhering the mosaic tile (mesh mounted) to the Onyx Trim using Onyx Adhesive Silicone.
- B) Use spacers as needed to position the mosaic tile while the silicone cures.

Apply adhesive silicone to back of tile

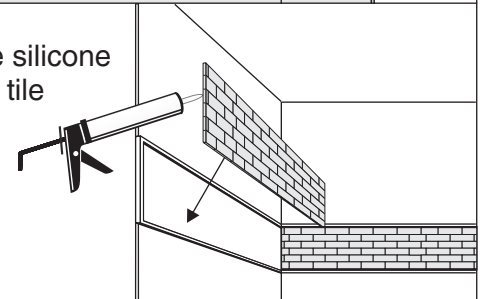

## 4 Installation of Grout

- A) Apply masking tape to the edge of the onyx trim leaving space for grout along the outer edges of the mosaic tile. The masking tape will prevent abrasives in the grout from scratching the Onyx surface.
- B) Apply the grout as with normal tile applications. (We recommend using a grout intended for showers.)
- C) Seal the grout as needed.
- D) Remove the masking tape.

